## **GEN 2.5 LIST OF RADIO NAVIGATION AIDS**

ID	STATION NAME	FACILITY	PURPOSE
AKI	Anduki	NDB	A, E
BR	Brunei	NDB	A, E
BRU	Brunei	DVOR/DME	A, E
ВІ	Brunei	ILS/LLZ/DME 21	А
BE	Brunei	ILS/LLZ/DME 03	Α

Note: A - used for aerodrome purpose (for details see the respective AD 2 section)

E - used for enroute purpose (for details see ENR 4-1)

## INTENTIONALLY

**LEFT** 

**BLANK**